

Tuning ignition manual engines without charger

The piston have to be mounted with the superior dead point at 0

1



2

